


For Models: LGQ8857HQ1, LGQ8857HZ1
(Designer White) (Designer Almond)

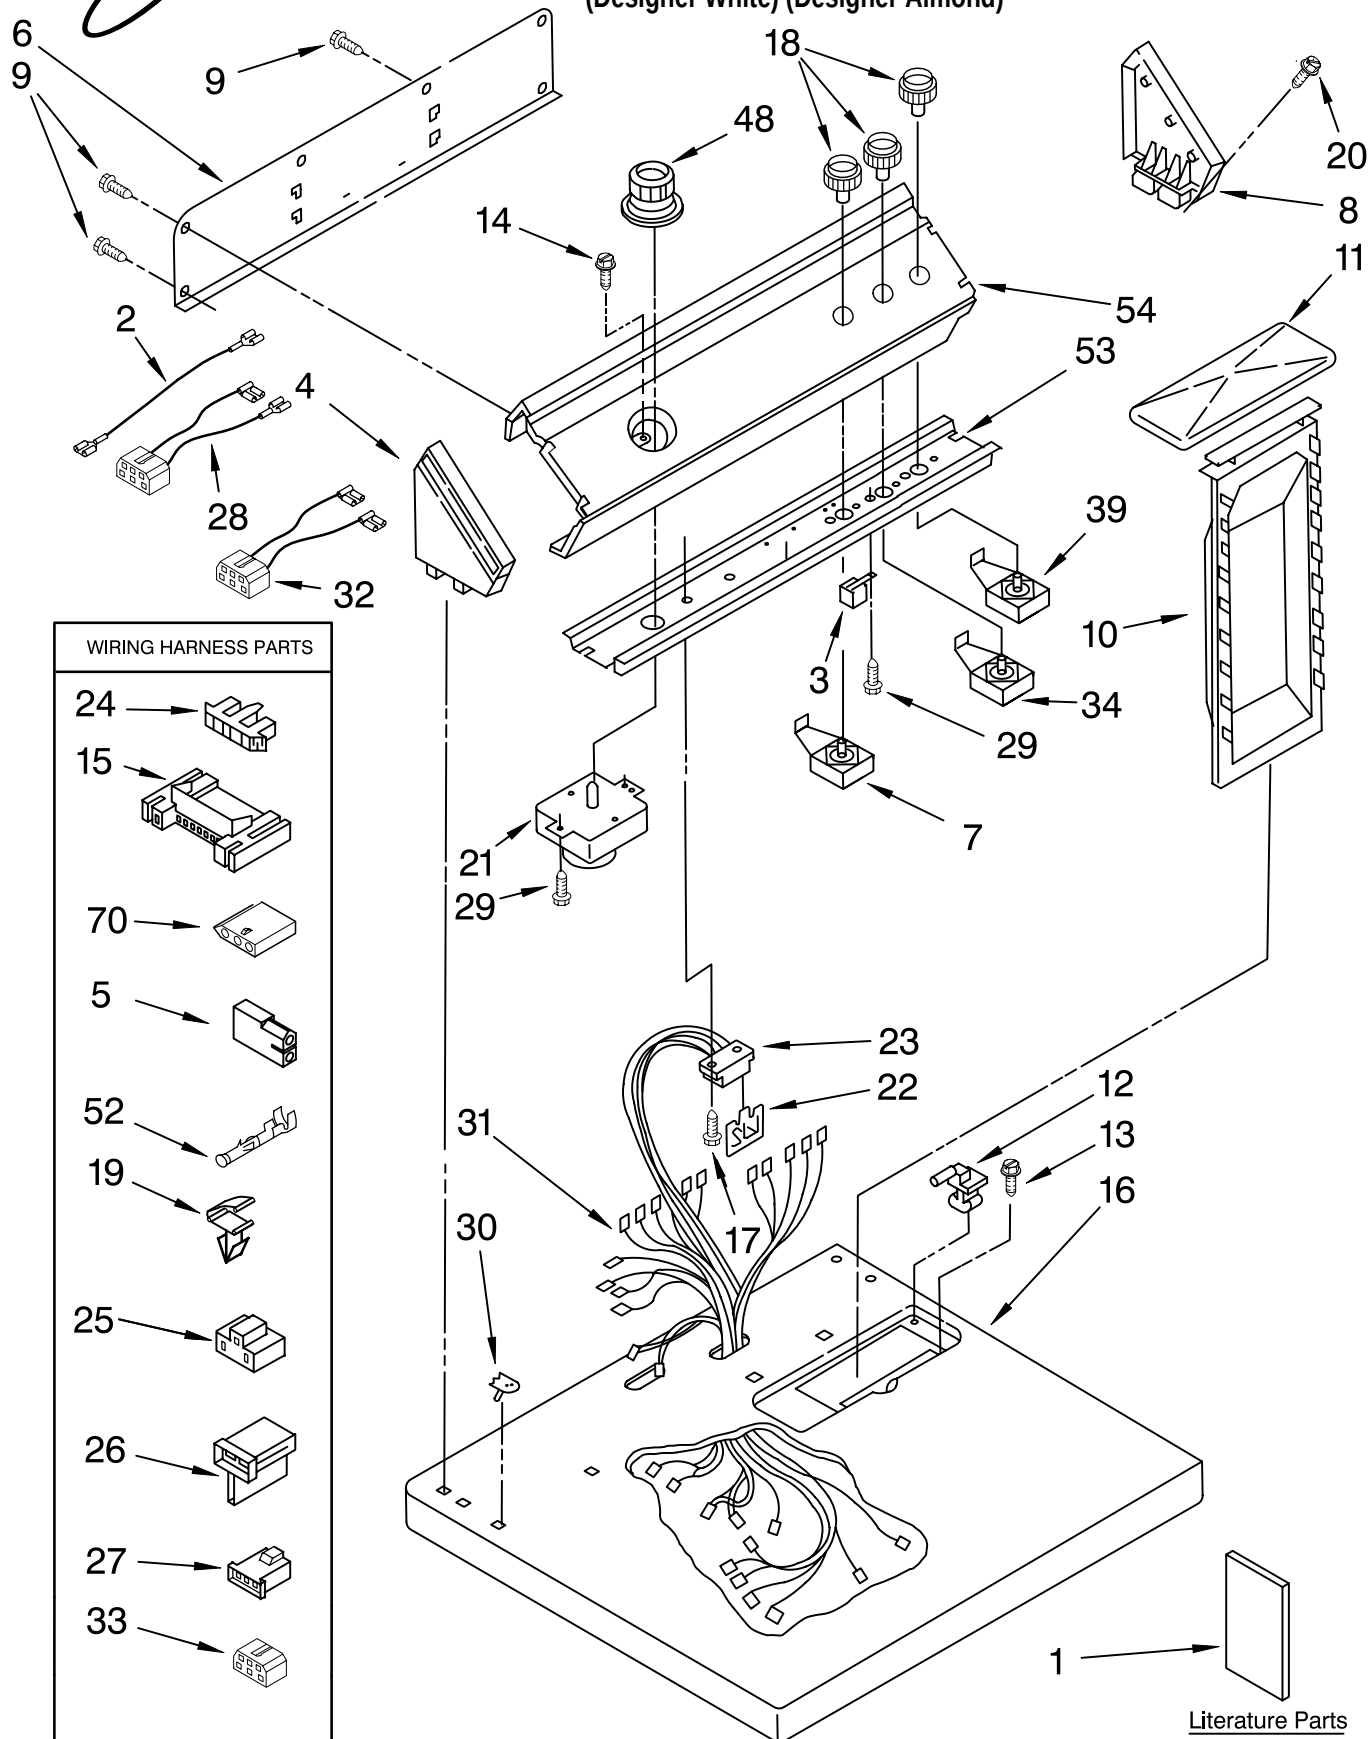

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: LGQ8857HQ1, LGQ8857HZ1

(Designer White) (Designer Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	LIT3405338	Literature Parts Instructions, Installation	12	339229	Hinge, R.H.	27	3403498	Connector, 3-Position (Gas Valve)
	LIT3406080	Use & Care Guide	13	688983	Screw, 8-18 x 5/8	28	3397695	Wire, Jumper (Guard On/Off)
	LIT3977704	Label, Wiring Diagram	14	3400859	Screw, Grounding	29	3390646	Screw, 8-18 x 5/16
2	3401684	Wire, Jumper (Black)	15	3395683	Connector (Motor)	30	357213	Nut, Push-In (2)
3	694419	Buzzer, Mini	16	3396022	Top White	31	3394309	Harness, Wiring
4		Cap, End (L.H.)		3396023	Almond	32	3396030	Wire, Jumper (Temperature)
	3358528	White	17	343641	Screw, 10-16 x 1/2	33	3347243	Connector 6-Circuit
	3358529	Almond	18		Knob, Control	34	3405156	Switch, Finish Guard
5	717252	Plug, 2-Way Terminal		3950759	White	39	3398095	Relay, Push-To-Start
6	3397545	Panel, Rear Console		3950760	Almond	48		Timer Knob Assembly
7	3399640	Switch, Temperature	19	3394427	Clip-Harness		3406143	White
8		Cap, End (R.H.)	20	388326	Screw, Console		3406144	Almond
	3358513	White	21	3976570	Timer Assembly (60 Hz.)	52	94614	Terminal
	3358514	Almond	22	3390537	Control, Electronic	53	8054298	Bracket, Control
9	693995	Screw, Hex Washer Head	23	3391885	Connector, Edge	54		Panel, Control
10	349639	Handle & Lint Screen Assembly	24	3397269	Connector-Timer		3976770	White
11		Cover, Lint Screen	25	3401144	Connector, (PTS Relay)		3976771	Almond
	688150	White	26	3403499	Connector, 2-Position (Gas Valve)	70	3936144	Connector
	689310	Almond						


OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>PAINT, BULK (1 qt.)</u>		
	72017	White		799344	White (Uncut)
	72107	Almond		978883	Almond (Uncut)
<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>			<u>Following May Be Purchased</u>		
	350930	White	<u>DO-IT-YOURSELF REPAIR MANUALS</u>		
	350956	Almond		LIT677818	Dryer
	350938	Primer, Gray			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: LGQ8857HQ1, LGQ8857HZ1
(Designer White) (Designer Almond)

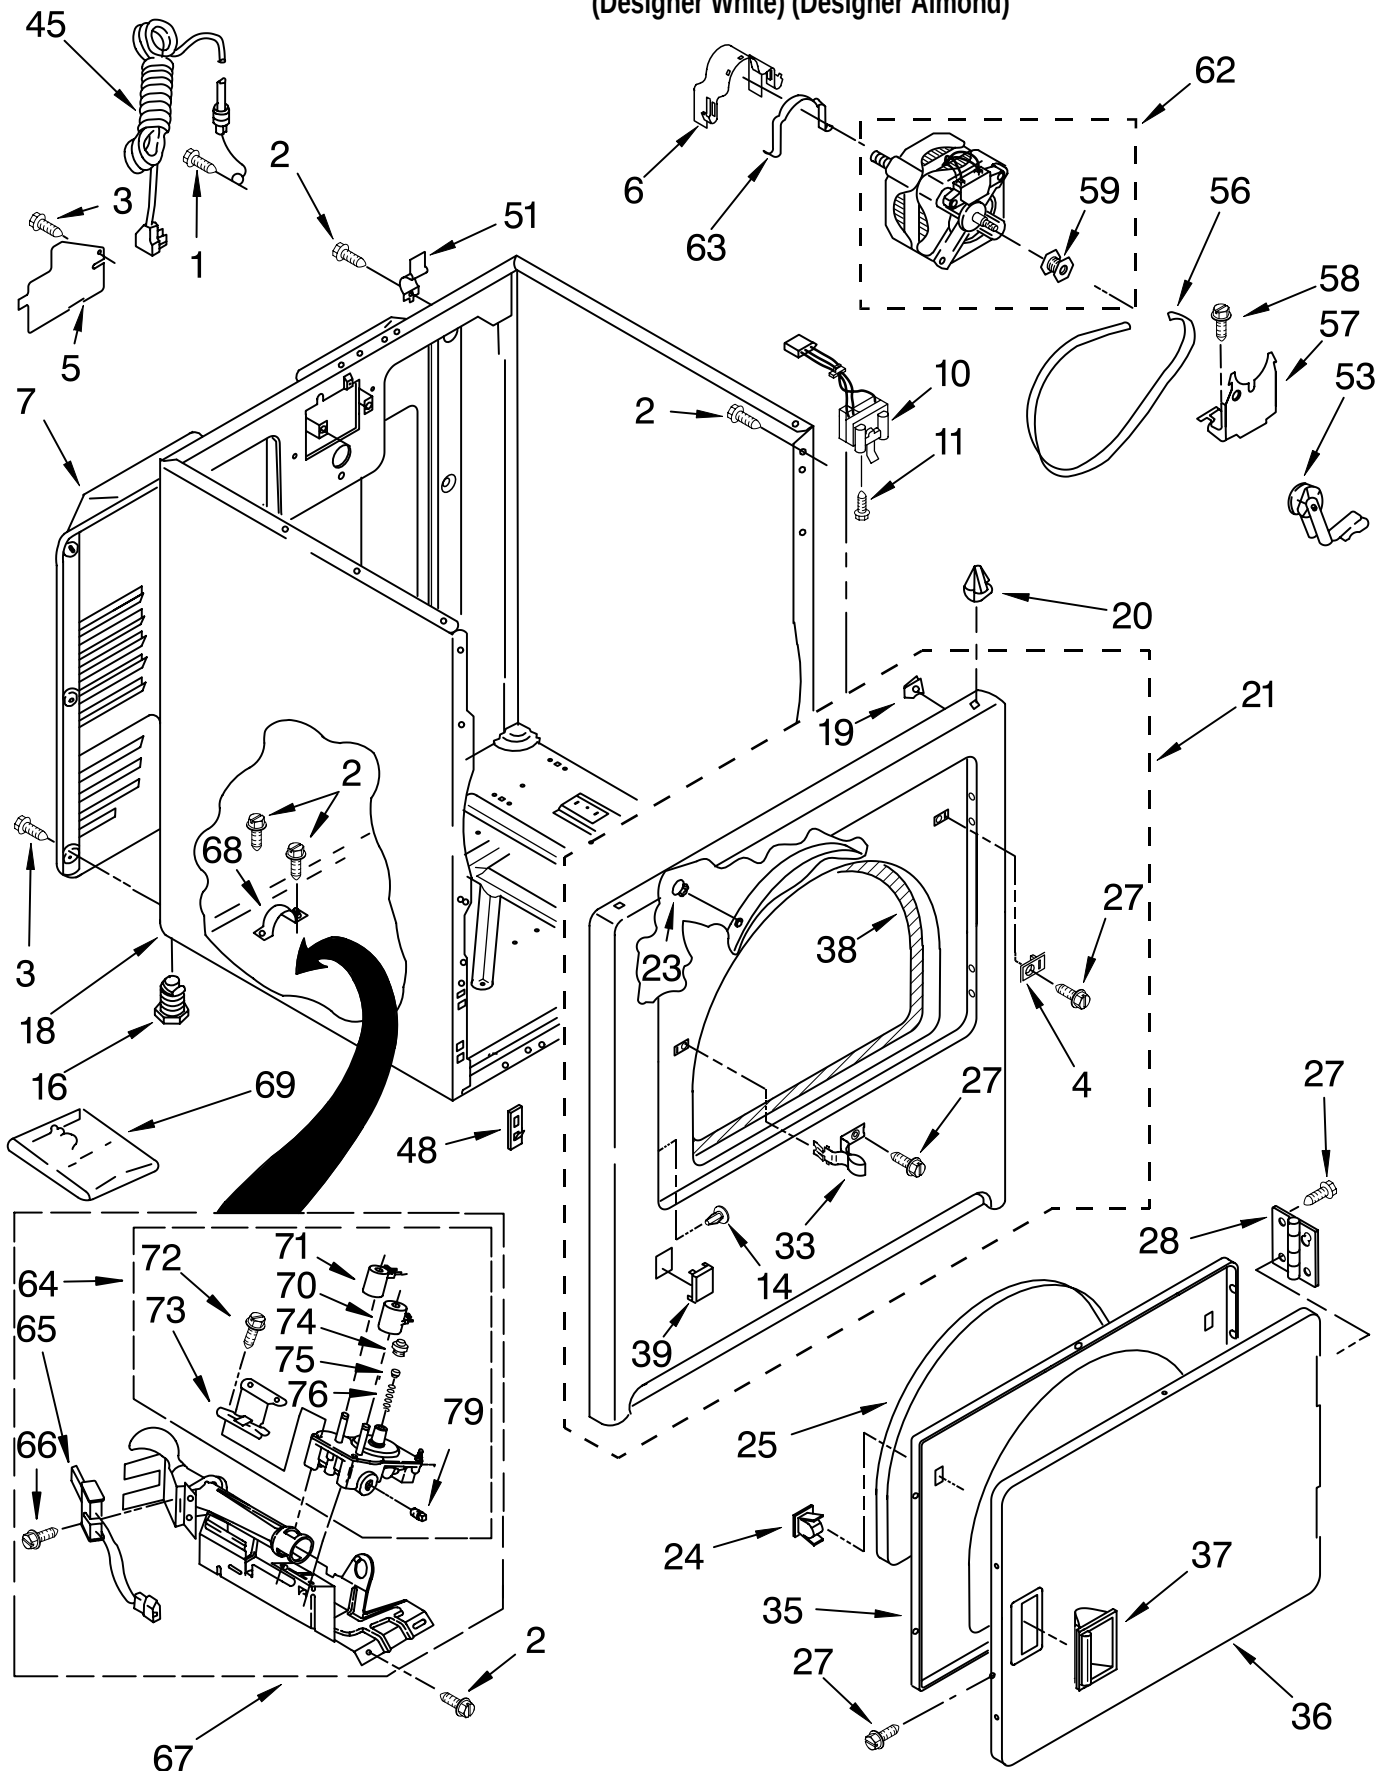

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: LGQ8857HQ1, LGQ8857HZ1
(Designer White) (Designer Almond)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	697776	Screw, 10-32 x 5/8 (External Ground)	21		Front Panel Assembly	63	660658	Clamp, Motor
2	343641	Screw, 10-16 x 1/2		3403447	White	64	3401775	Valve, Gas 60 Hz. (Complete)
3	693995	Screw, Hex Head		3403448	Almond	65	686590	Ignitor
4		Plug, Strike Hole	23	685203	Clip, Felt Pad (2)	66	3393909	Lock Screw & Washer (8-32 x 5/8)
	3403630	White	24	690081	Catch, Door Assembly	67	3402844	Burner Assembly, 60 Hz. (See Pages 7 & 8 For Further Burner Breakdown)
	3403631	Almond	25	3405246	Seal, Door			
5	3396795	Cover, Block	27	342055	Screw, 8-18 x 1/2	68	341029	Clamp, Pipe
6	3404162	Clamp, Motor (W/Shield)	28	3405514	Hinge, Door	69	694572	Kit, Conversion Type 1, 2 & 3 To Type 4 (LPG)
7	3396805	Panel, Rear	33	3403431	Strike, Door	70	694539	Coil, 60 HZ. Split (3 Terminal) (Pilot Position)
10	3406107	Door Switch Assembly	35	3402341	Door, Rear	71	694540	Coil, 60 HZ. (2 Terminal) (Main)
11	697773	Screw, 6-20 x 7/8	36	3402335	White	72	694421	Screw, Bracket Mounting (8-32 x 1/2)
14		Plug, Hinge Hole		3402336	Almond	73	694538	Bracket, Coil
	3404413	White	37	3405184	White	74	694424	Leak Limiter
	3404414	Almond		3405185	Almond	75	694423	Screw, Regulator Adjustment
16	3392100	Foot, Dryer	38	3406129	Seal & Bearing Assembly	76	694422	Spring, Regulator
	279810	Foot-Optional (Extended Length Package of 2) (Not Included)	39		Plug, Front Panel	79	239822	Plug, Pipe
				3394975	White			
18		Cabinet		3394976	Almond			
	3399585	White	45	344020	Cord, Power			
	3399586	Almond (Includes Illus. Nos. 5,7,16,48, And 57.)	48	3394083	Clip, Front Panel			
19	98234	Clip, Ground (2)	51	238088	Hinge, Top (2)			
20	690363	Lock, Front Top (2)	53	691366	Idler & Pulley Assembly			
			56	8066065	Belt, Drive			
			57	348780	Base, Motor			
			58	3400500	Bolt, 5/16-18 x 3/4			
			59	3394341	Pulley, 60 Hz.			
			62	3976707	Motor Assembly 60 Hz.			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LGQ8857HQ1, LGQ8857HZ1

(Designer White) (Designer Almond)

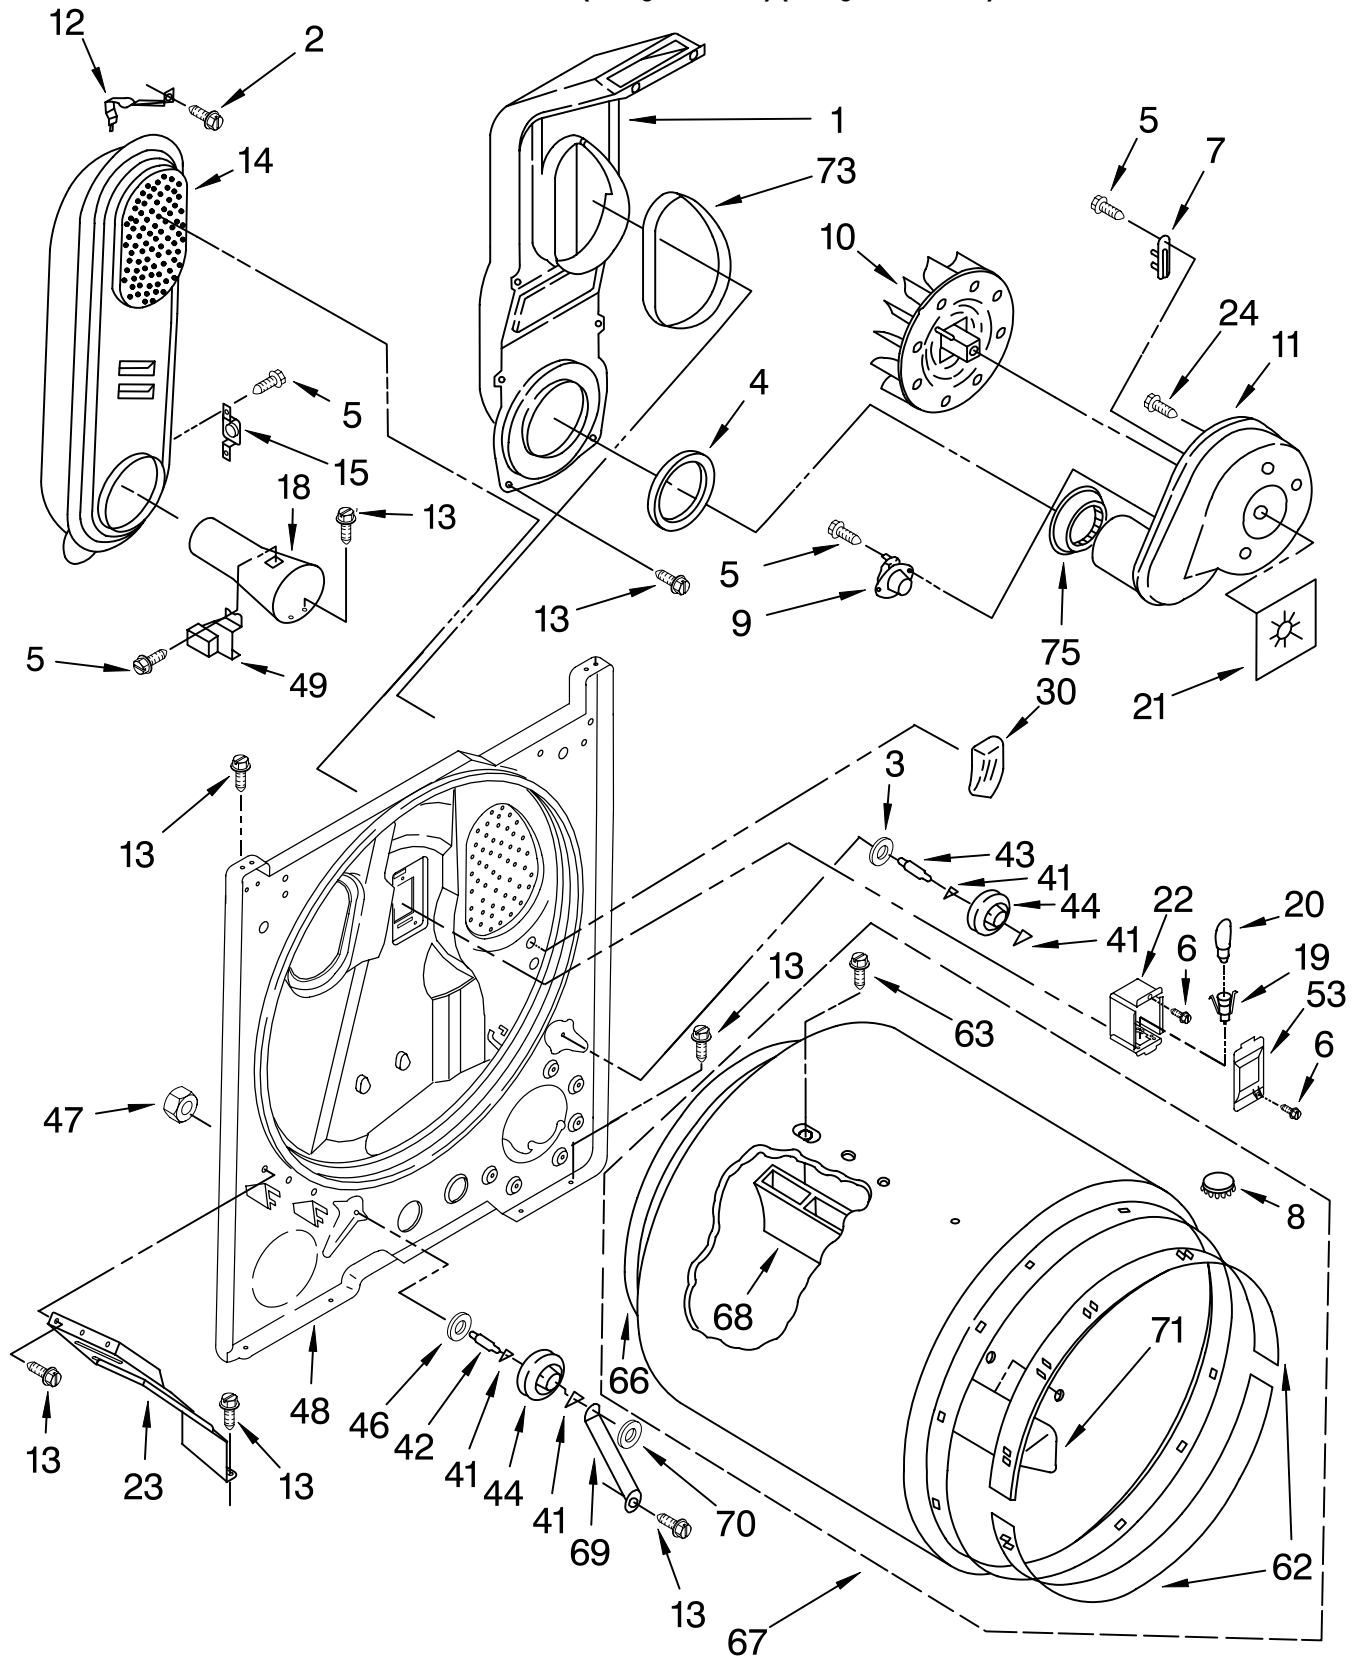

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LGQ8857HQ1, LGQ8857HZ1
(Designer White) (Designer Almond)


Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8-18 x 5/8
3	3388703	Washer-Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8-18 x 3/8
6	487909	Screw, 8-18 x 1/2
7	3392519	Fuse, Thermal
8	3977358	Drum Hole Plug
9	3977706	Thermostat, Internal-Bias
10	694089	Wheel, Blower (Includes Illus. No. 21)
11	3405016	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10-16 x 1/2
14	3394343	Box, Heater
15	3403140	Thermostat, 205°F (96°C)
18	8066049	Funnel, Burner
19	3403634	Socket Assembly
20	3406124	Bulb
21	3394196	Seal, Blower
22	3977373	Bracket, Drum Light
23	3406022	Bracket, Bulkhead
24	693995	Screw, 8-18 x 3/8
30	3976479	Pad, Sensor
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8-16
48	3403414	Bulkhead
49	338906	Sensor, Radiant
53	3402841	Lens, Drum Light
62	692526	Ring, Bearing
63	97787	Screw, 11-16 x 3/4
66	3406130	Seal, Rear Drum
67	695587	Drum Assembly
68	692490	Baffle, Drum (2)
69	3976434	Bracket, Support
70	90296	Clip
71	3403636	Baffle, Drum (1)
73	339956	Seal
75	696302	Shield, Exhaust

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3402844 BURNER ASSEMBLY

For Models: LGQ8857HQ1, LGQ8857HZ1
(Designer White) (Designer Almond)

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED, TYPE 3 - MANUFACTURED
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

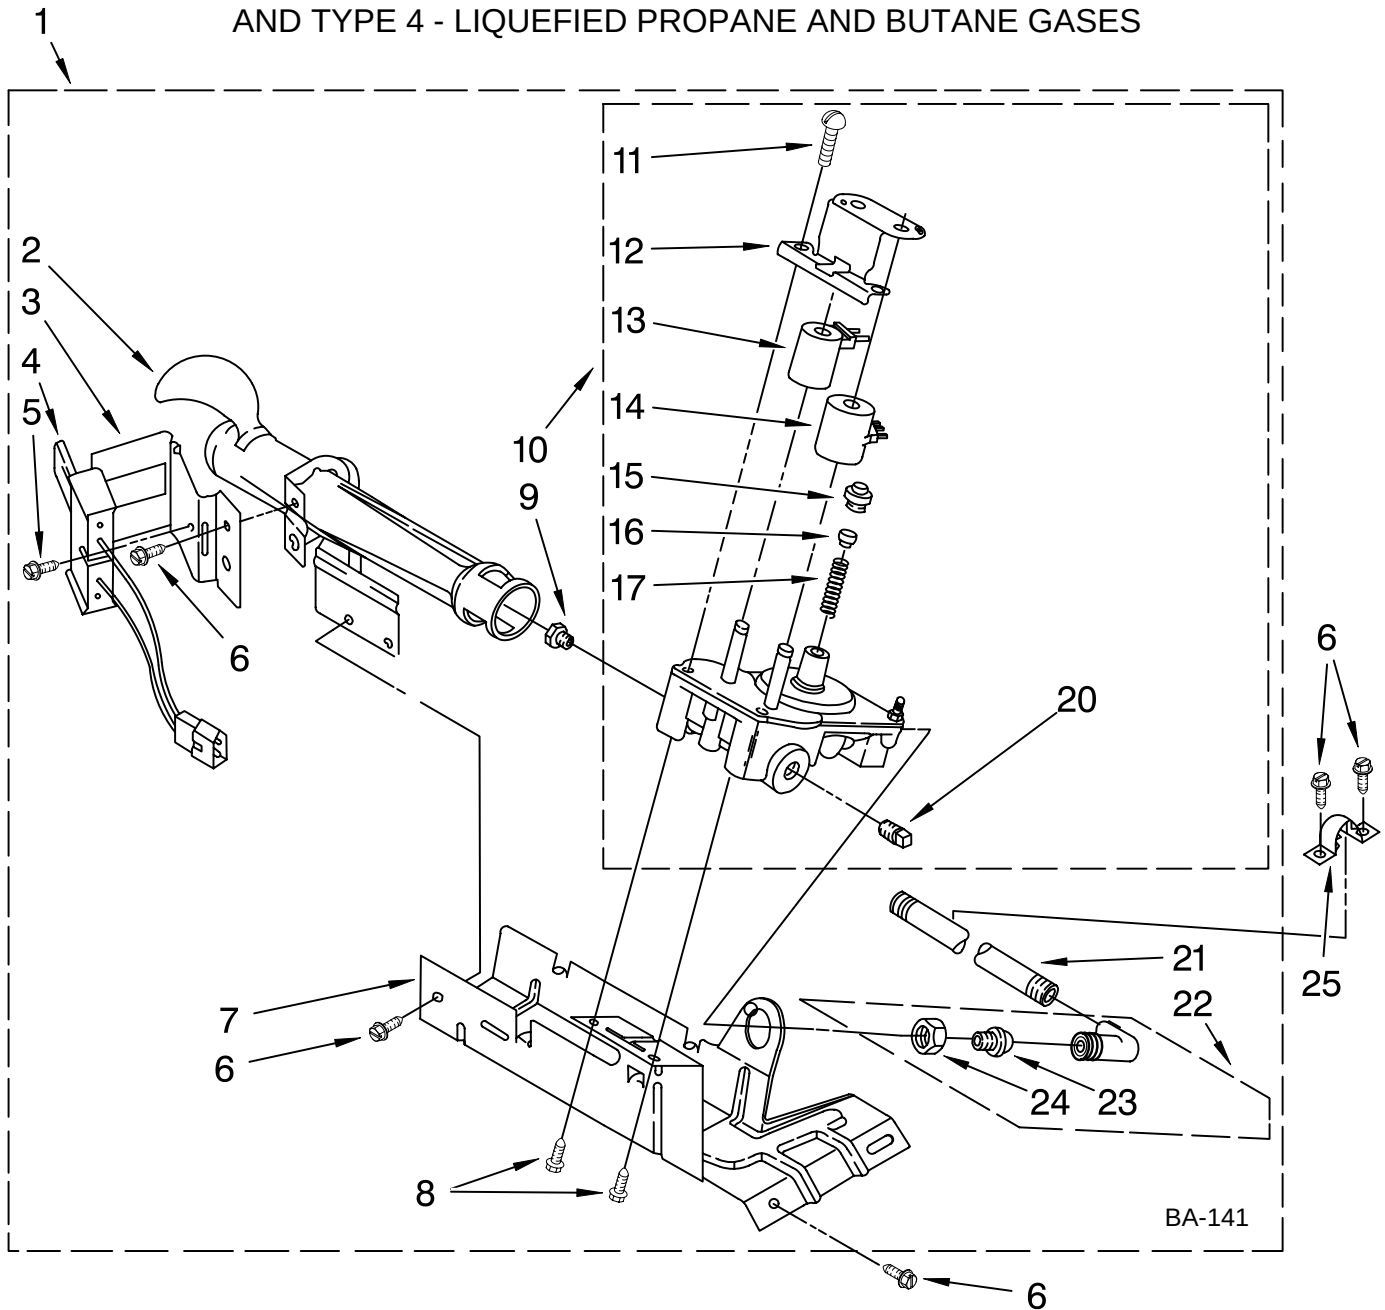

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3402844 BURNER ASSEMBLY

For Models: LGQ8857HQ1, LGQ8857HZ1

(Designer White) (Designer Almond)

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED, TYPE 3 - MANUFACTURED
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

Illus. No.	Part No.	DESCRIPTION
1	3402844	Burner Assembly 60 Hz. (Type 1, 2 & 3) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer (8-32 x 5/8)
6	343641	Screw, 10-16 x 1/2
7	693986	Base, Burner
8	3387057	Screw, 8-18 x 3/8 (2)
9		Orifice, Burner
	234826	Type 1
	15775	Type 2
	15419	Type 3
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	3401775	Valve, 60 Hz.
11	694421	Screw, 8-32 x 1/2 (2)
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)
15	694424	Leak Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
20	239822	Plug, Pipe
21	233273	Pipe, Gas Supply
22	3406052	Elbow Union Assembly
23	3393767	Pipe, Tail
24	233076	Nut, Compression
25	341029	Clamp, Pipe

Following Parts Not Illustrated

694572 Conversion Kit
(Type 1, 2 & 3)
to Type (4) L.P.G.

BA-141